
cozysewpatterns

Print this Calibration Test page first!

Size: Height: 167.75, Bust: 82.5, Waist: 66, Hips: 90.25
SIZE 0

Notes

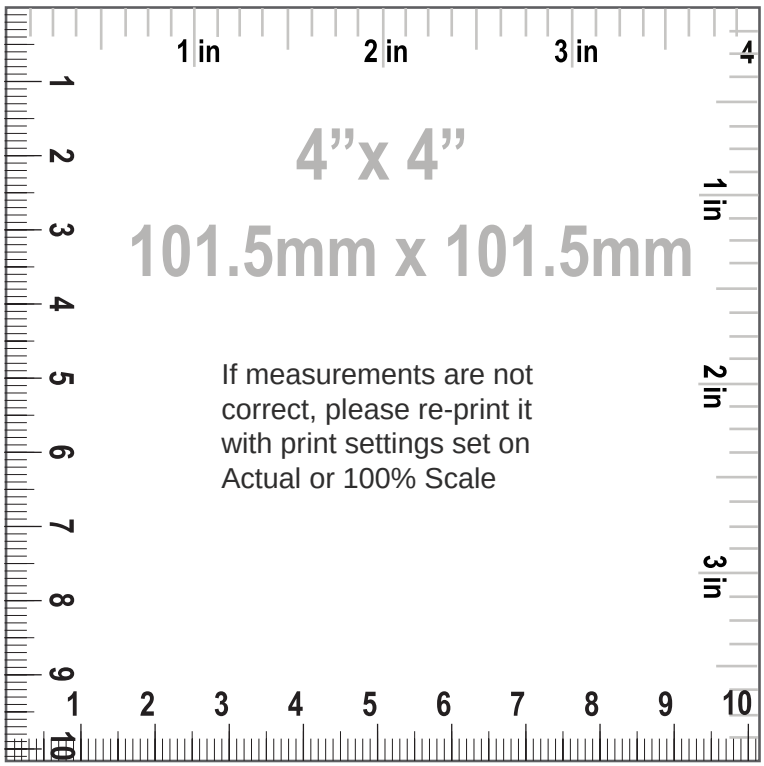

How to print

Printing

Once your Calibration Test Page has been printed, measure the 4”x 4” (10cm) scale box with a ruler. If the lengths match, you can confidently print your pattern. If the rulers do not match, set your print settings to 100% or Actual and retry.

Cutting

Your printouts will always have a dashed border to perfectly match your sheets. Cut off the right edge of each page. Be careful not to cut beyond the dashed mark, otherwise your patterns will not align accurately.

Tapping

Group each sheet by the second number marked on each pate i.e. in a group 1, there are: 1/1, 2/1, 3/1, 4/1, etc. In a group 2: 1/2, 2/2 etc. 2. Place page 1/1 on top of the page 2/1, overlapping the right side edge. Match corners and crosses and secure with a pin or tape. Then use a scotch tape to permanently attach the sheets together.

SIZE 0
Seam Allowance: 1 (3/8 in)

Pattern pieces:


1. "PANTS FRONT", MAIN FABRIC: Cut 2
2. "PANTS BACK", MAIN FABRIC: Cut 2
3. "WAISTBAND", MAIN FABRIC: Cut 1
4. "POCKET BAG", LINING: Cut 4

Pattern Specs (Circumferences are divided by 2):

1. Hem max 3.00 none (1 1/8 in)
2. Seam allowance max 2.00 none (3/4 in)
3. Seam allowance poc max 3.00 none (1 1/8 in)
4. Stretch factor 0.92 none (3/8 in)
5. Stretch factor horizontal 0.92 none (3/8 in)
6. Stretch factor vertical 1.00 none (3/8 in)
7. Pocket entry length 11.16 cm (4 3/8 in)
8. Waist to pocket length 5.94 cm (2 3/8 in)
9. Low hips 44.03 cm (17 3/8 in)
10. Thigh 28.31 cm (11 1/8 in)
11. Knee 22.32 cm (8 3/4 in)
12. Bottom opening 19.88 cm (7 7/8 in)
13. Front rise 26.93 cm (10 5/8 in)
14. Back rise 35.66 cm (14 in)
15. Crotch height 26.08 cm (10 1/4 in)
16. Inseam length 74.27 cm (29 1/4 in)
17. Pants side seam length 101.28 cm (39 7/8 in)
18. Pocket bag height 21.42 cm (8 3/8 in)
19. Waistband width 3.30 cm (1 1/4 in)
20. Waistband elastic width 3.30 cm (1 1/4 in)
21. Waistband length 42.03 cm (16 1/2 in)
22. Waistband elastic length 55.20 cm (21 3/4 in)


cozysewpatterns

Paper Size: LETTER;
Print Actual Size (100% Scale);

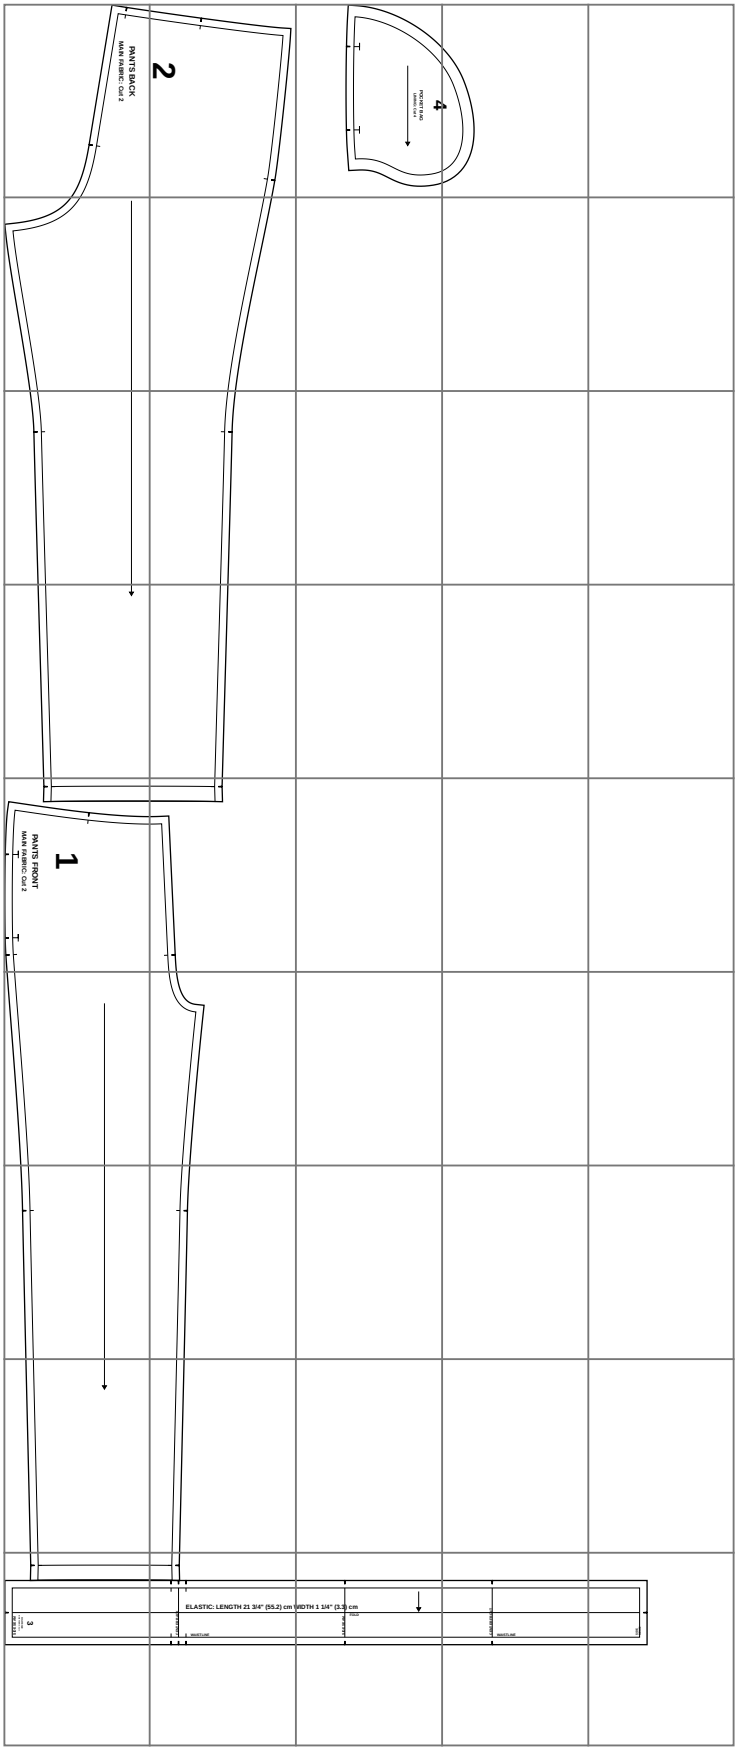


PANTS BACK

MAIN FABRIC: Cut 2

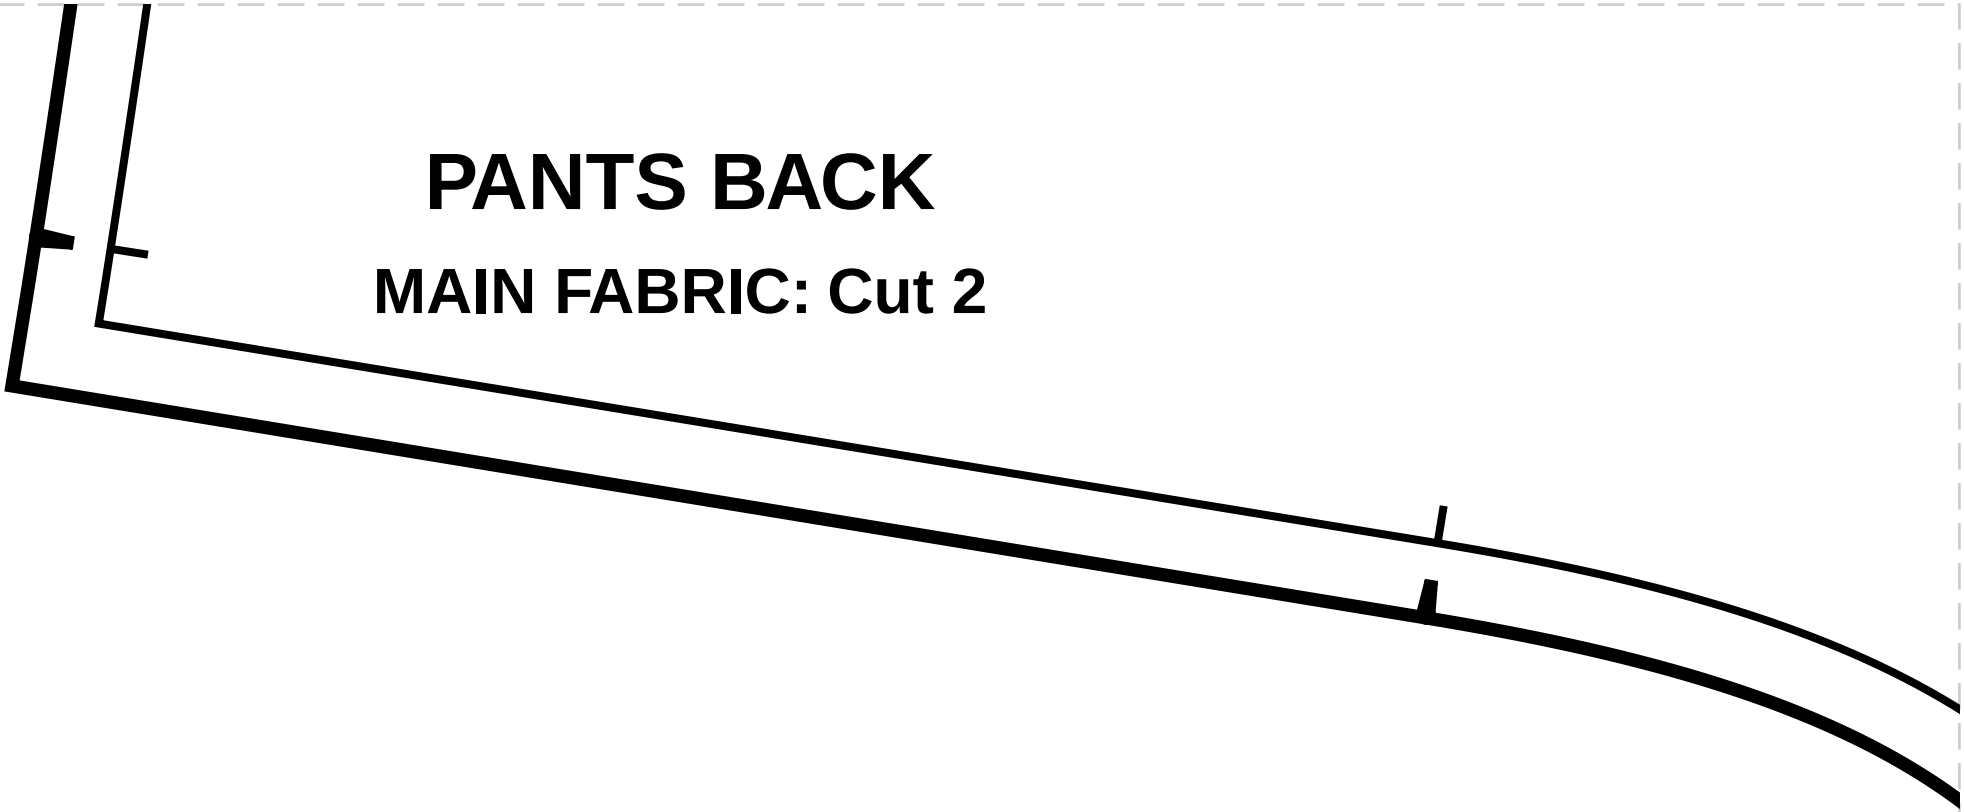


2

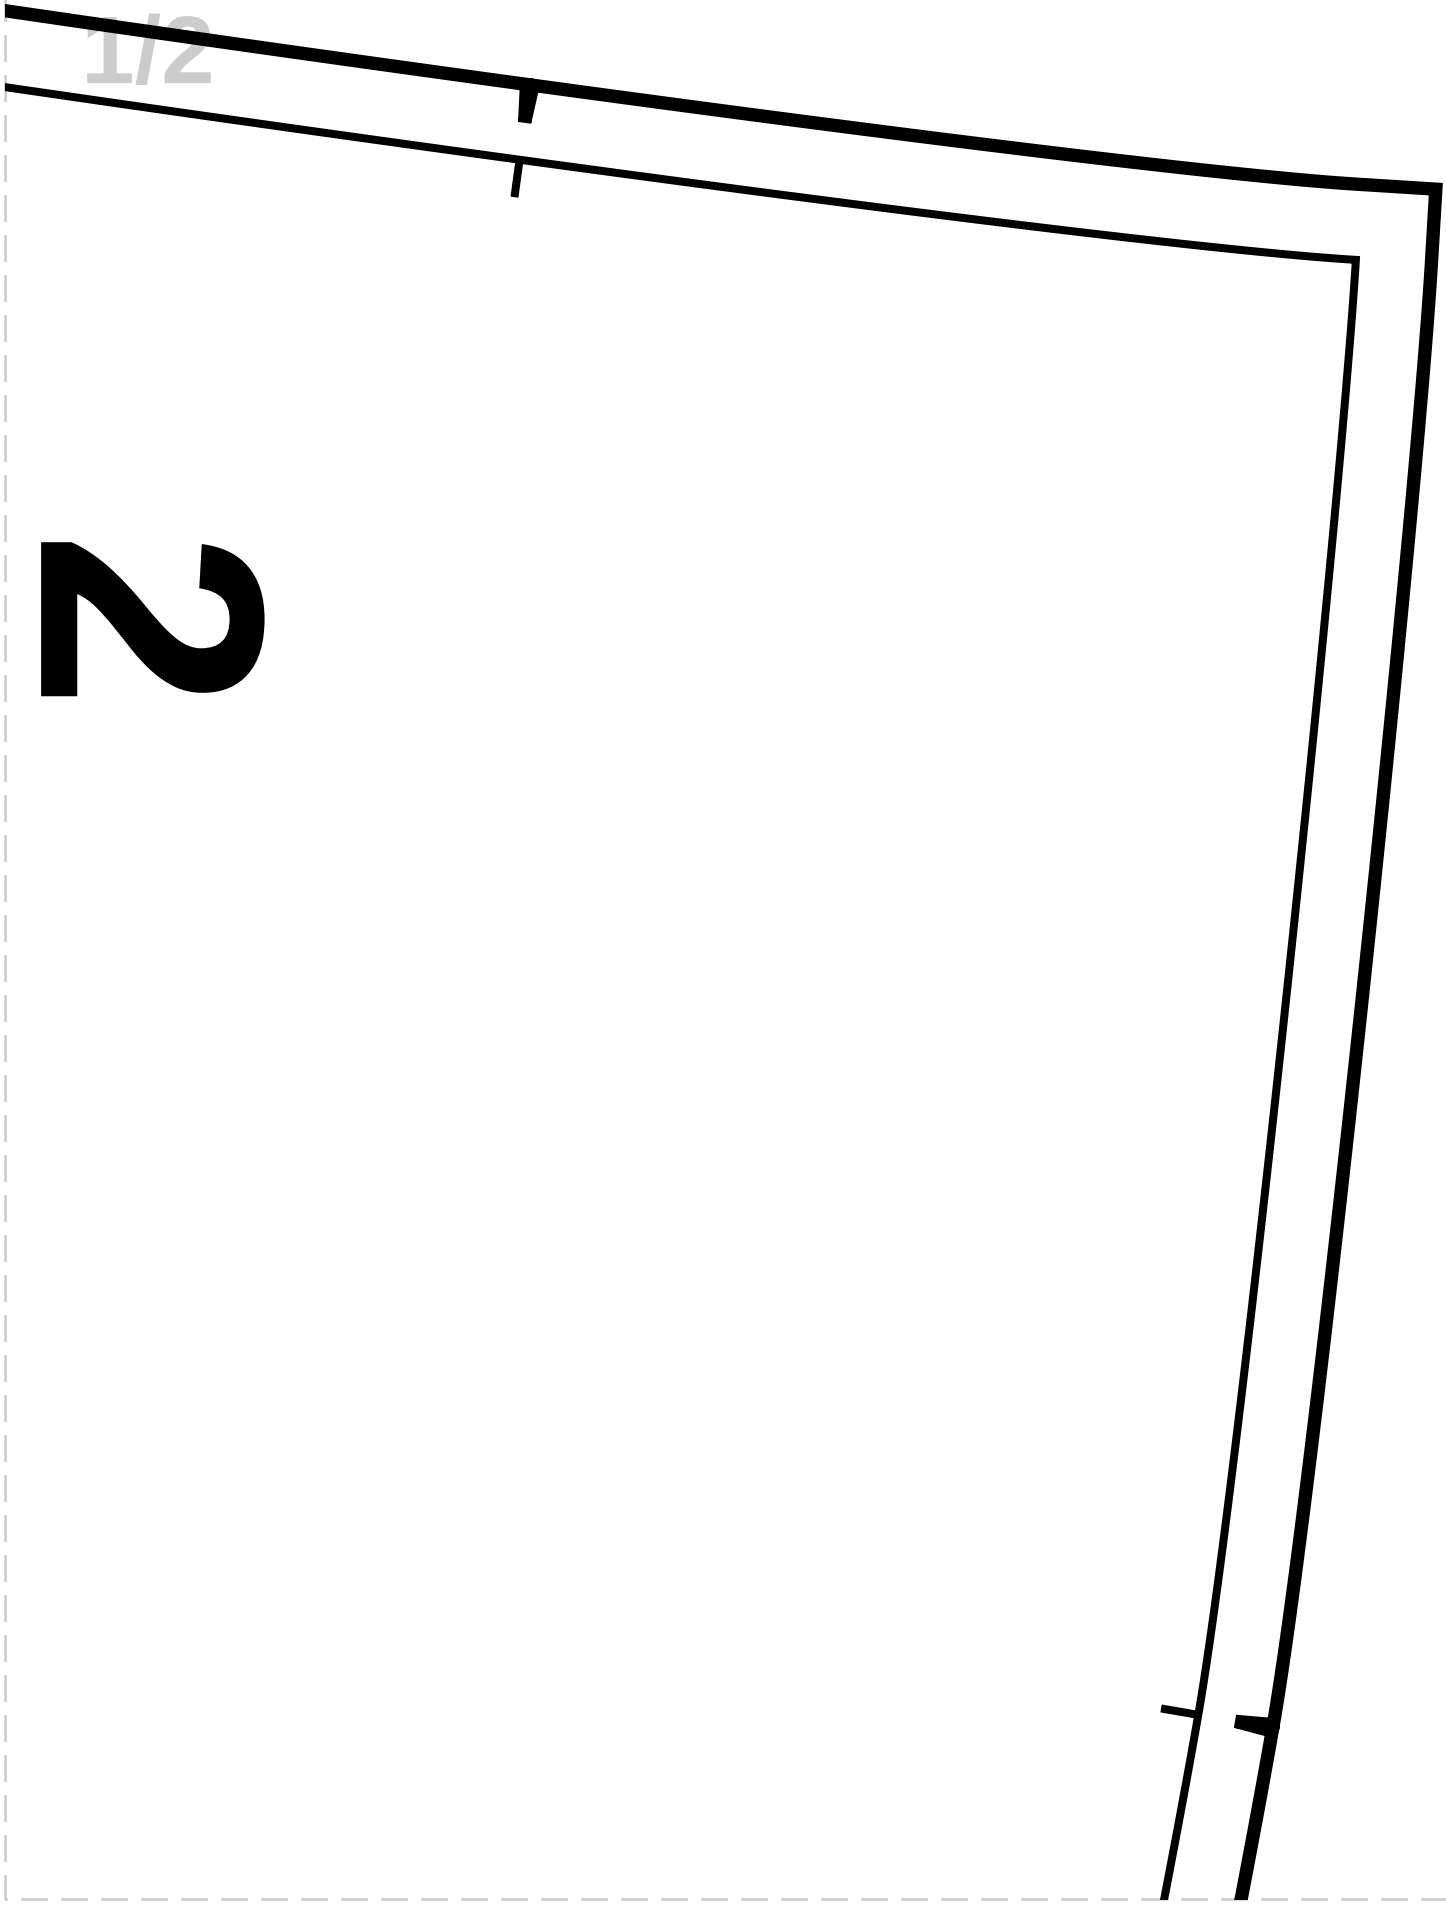



4


POCKET BAG


LINING: Cut 4

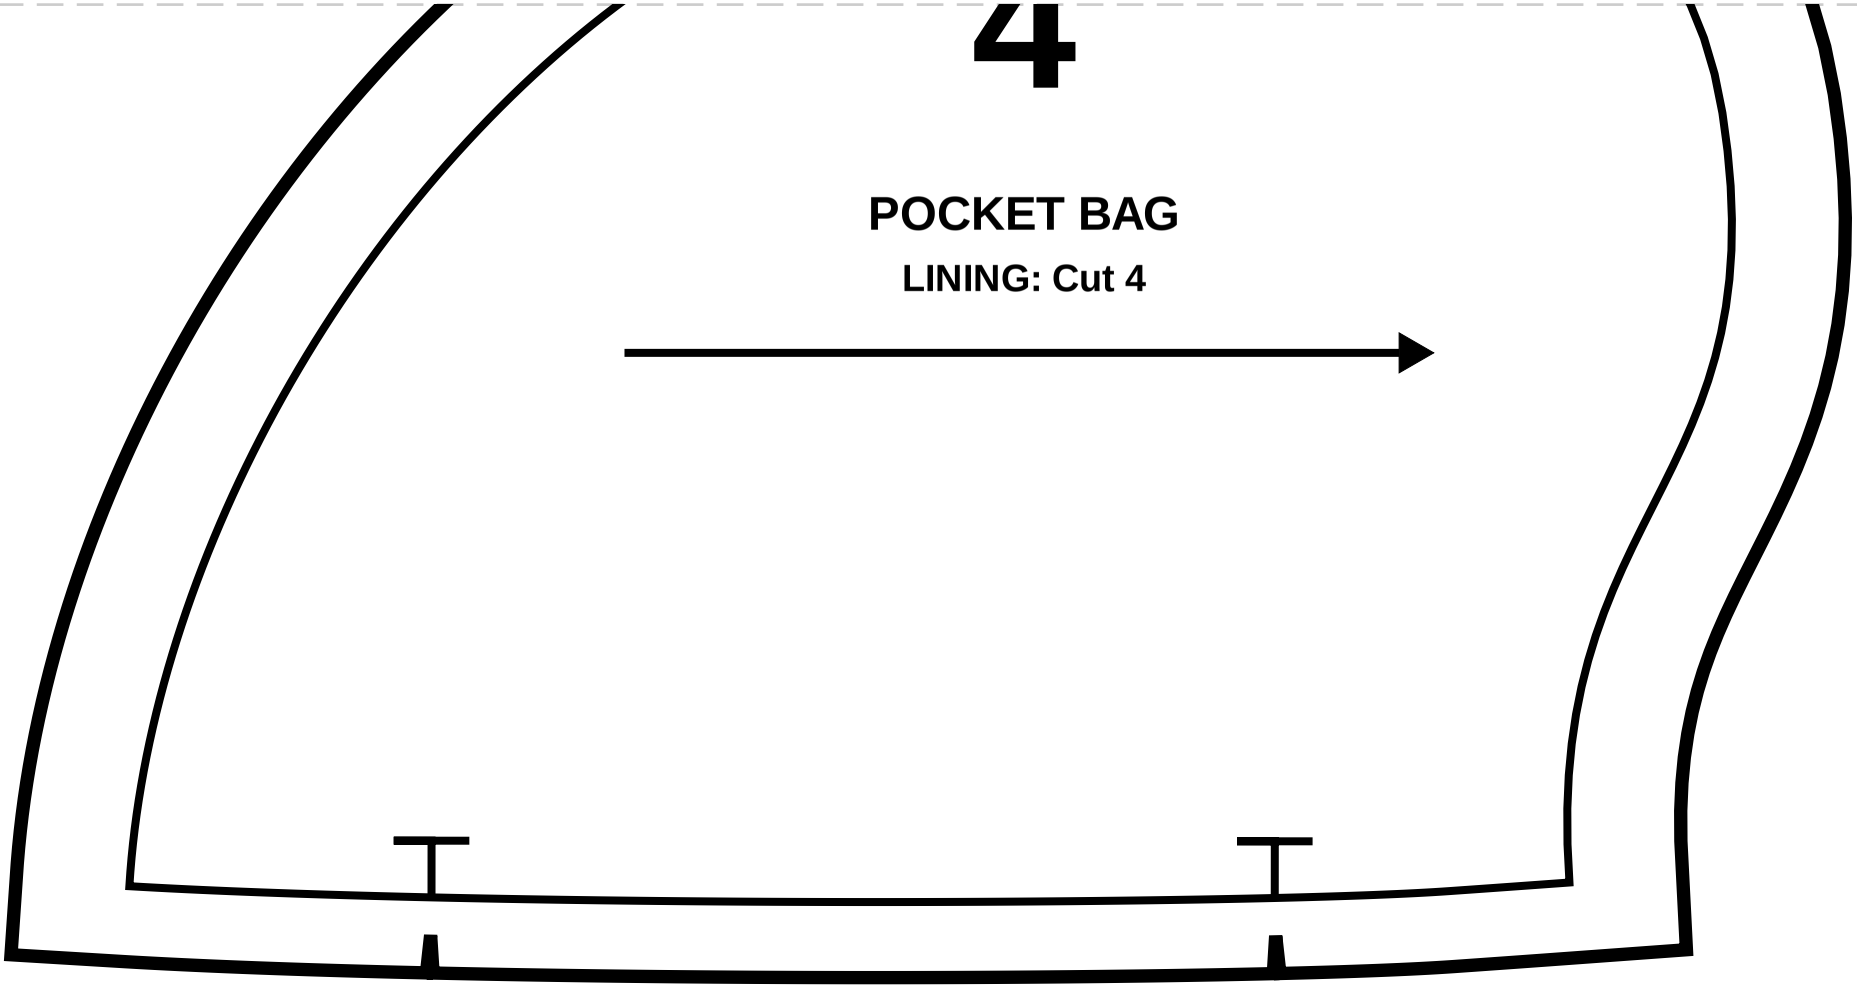

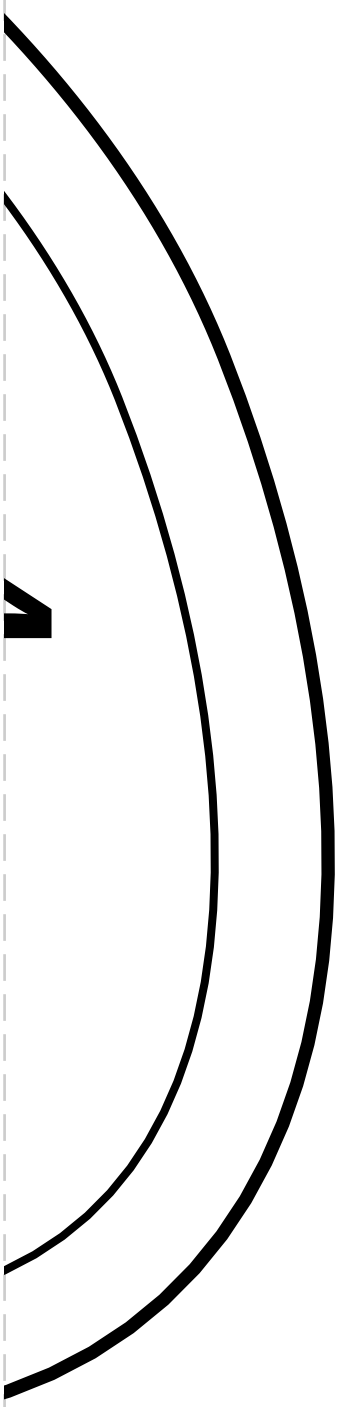


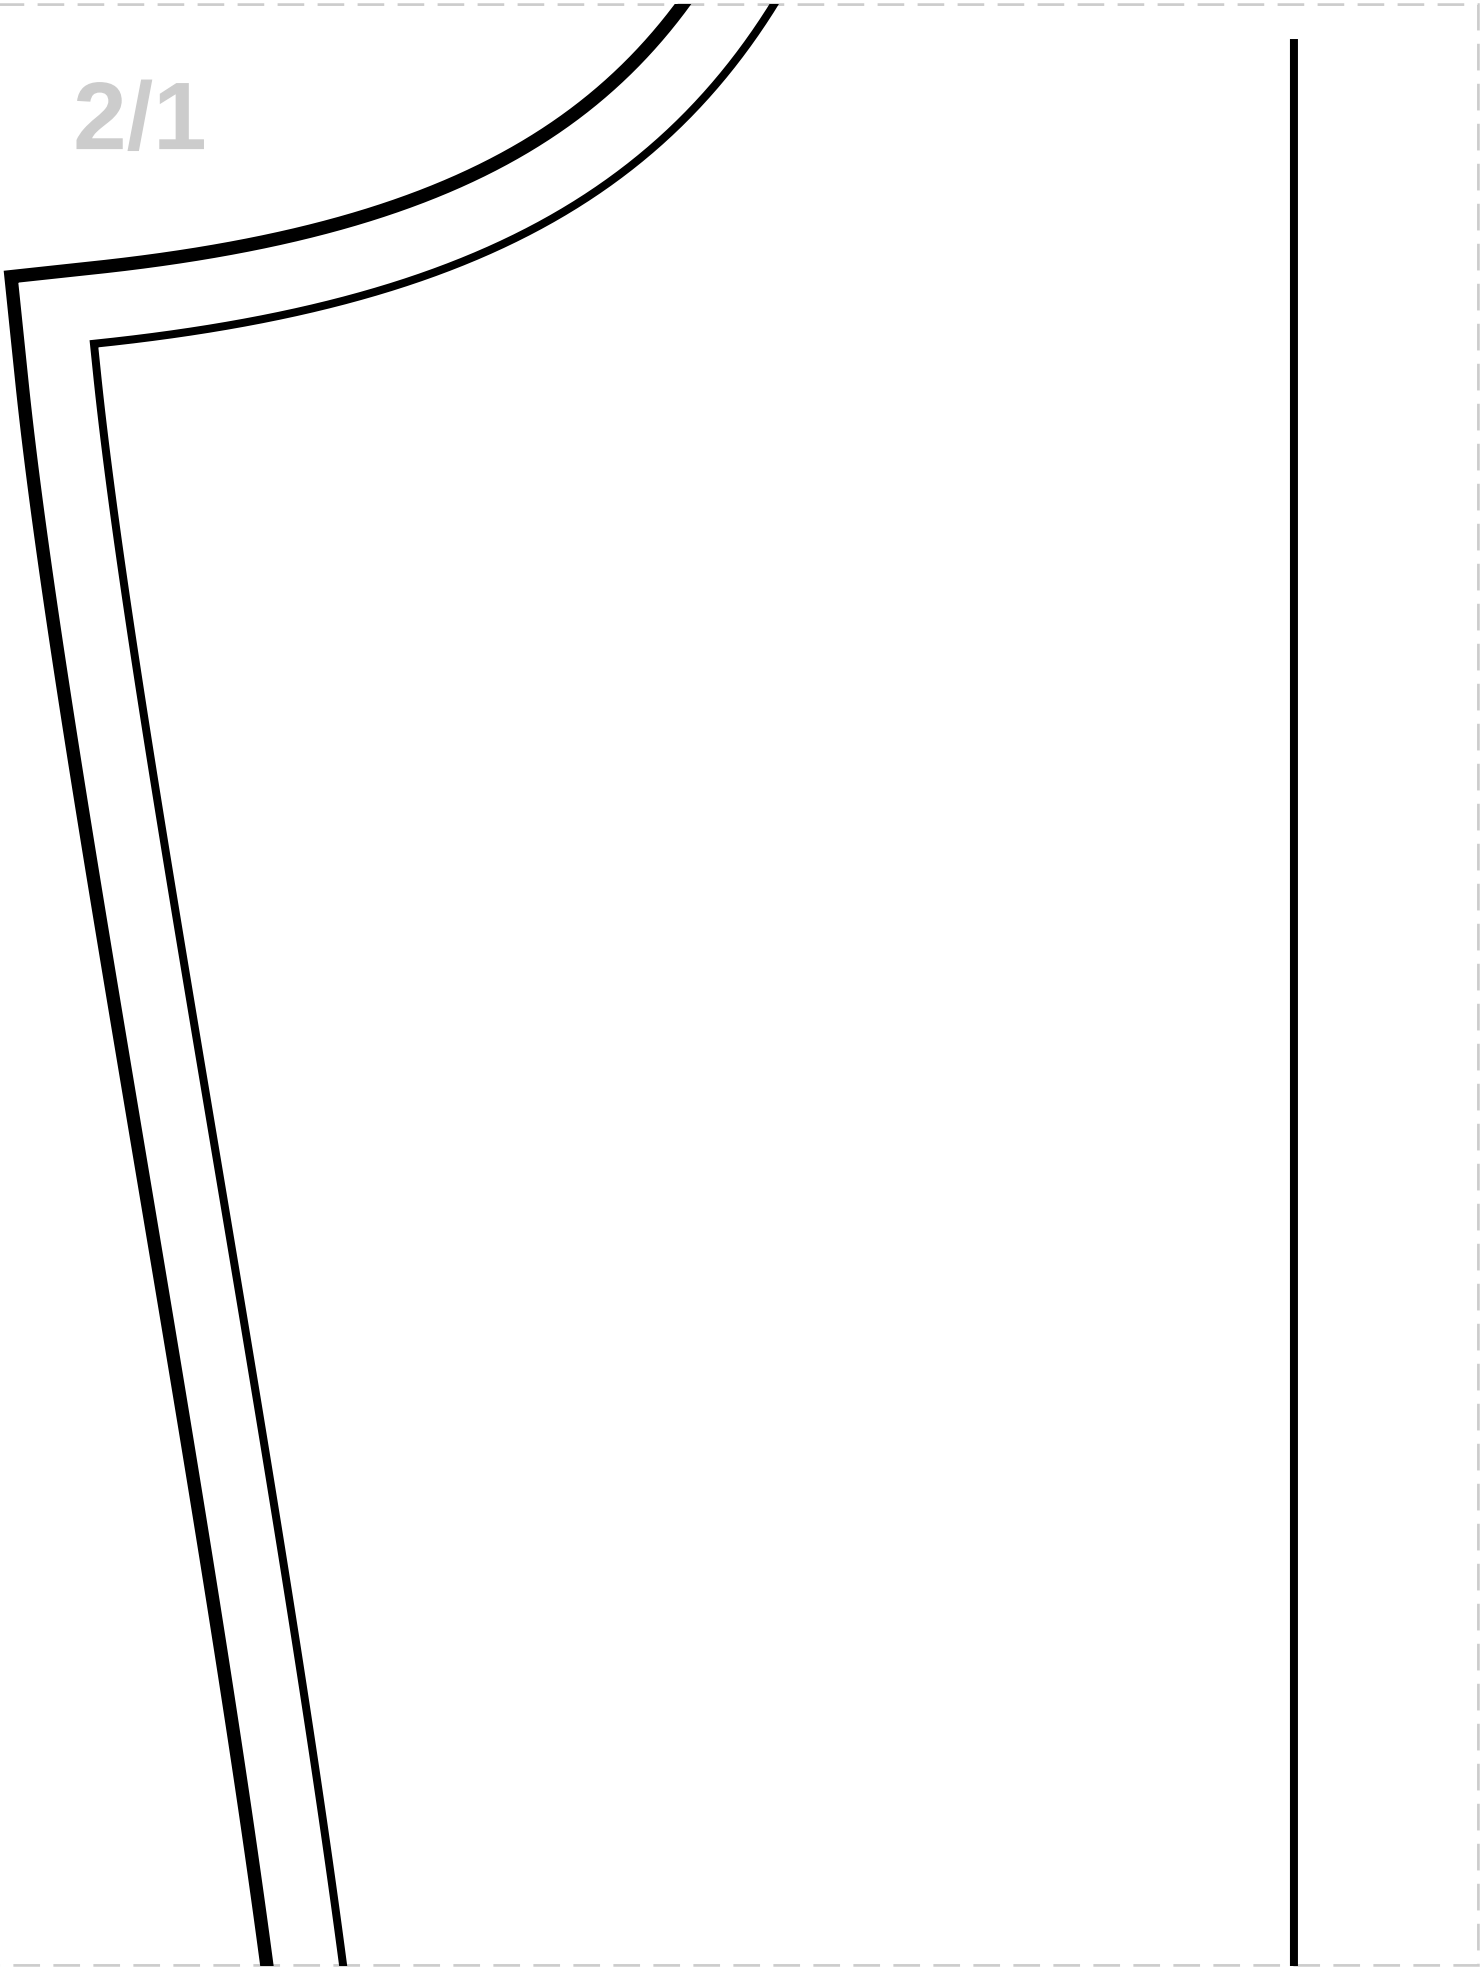


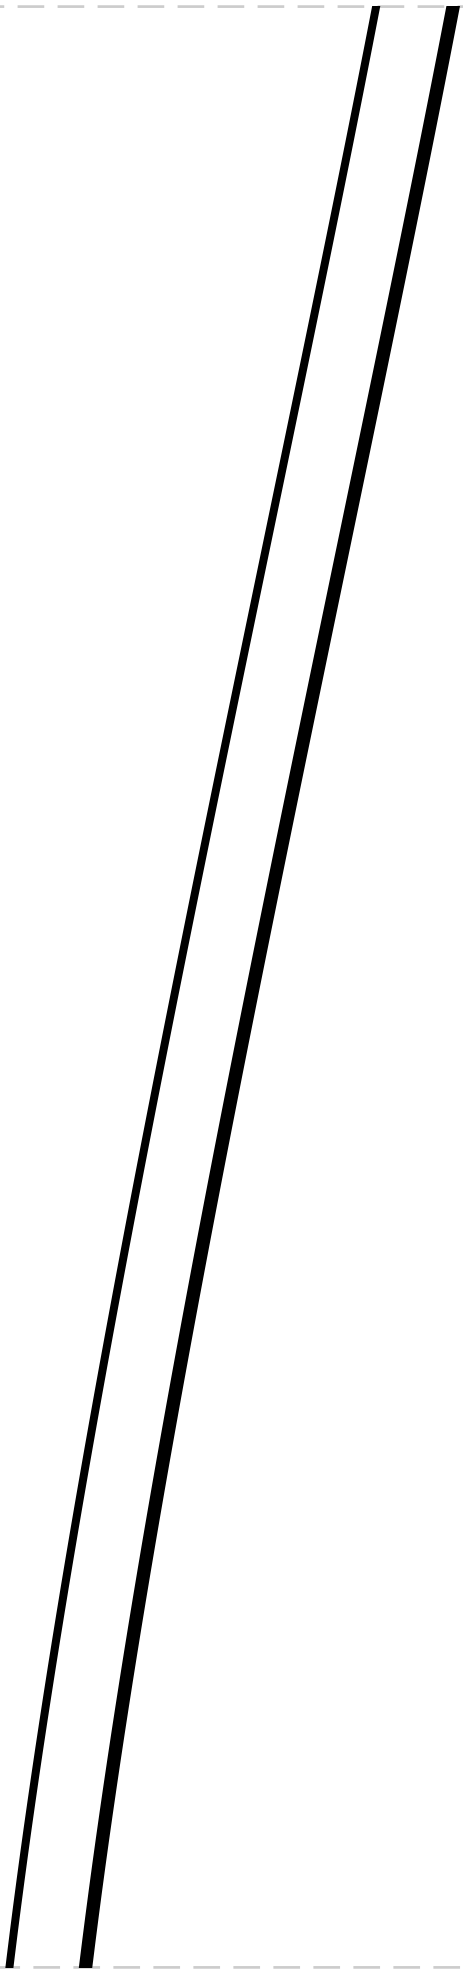


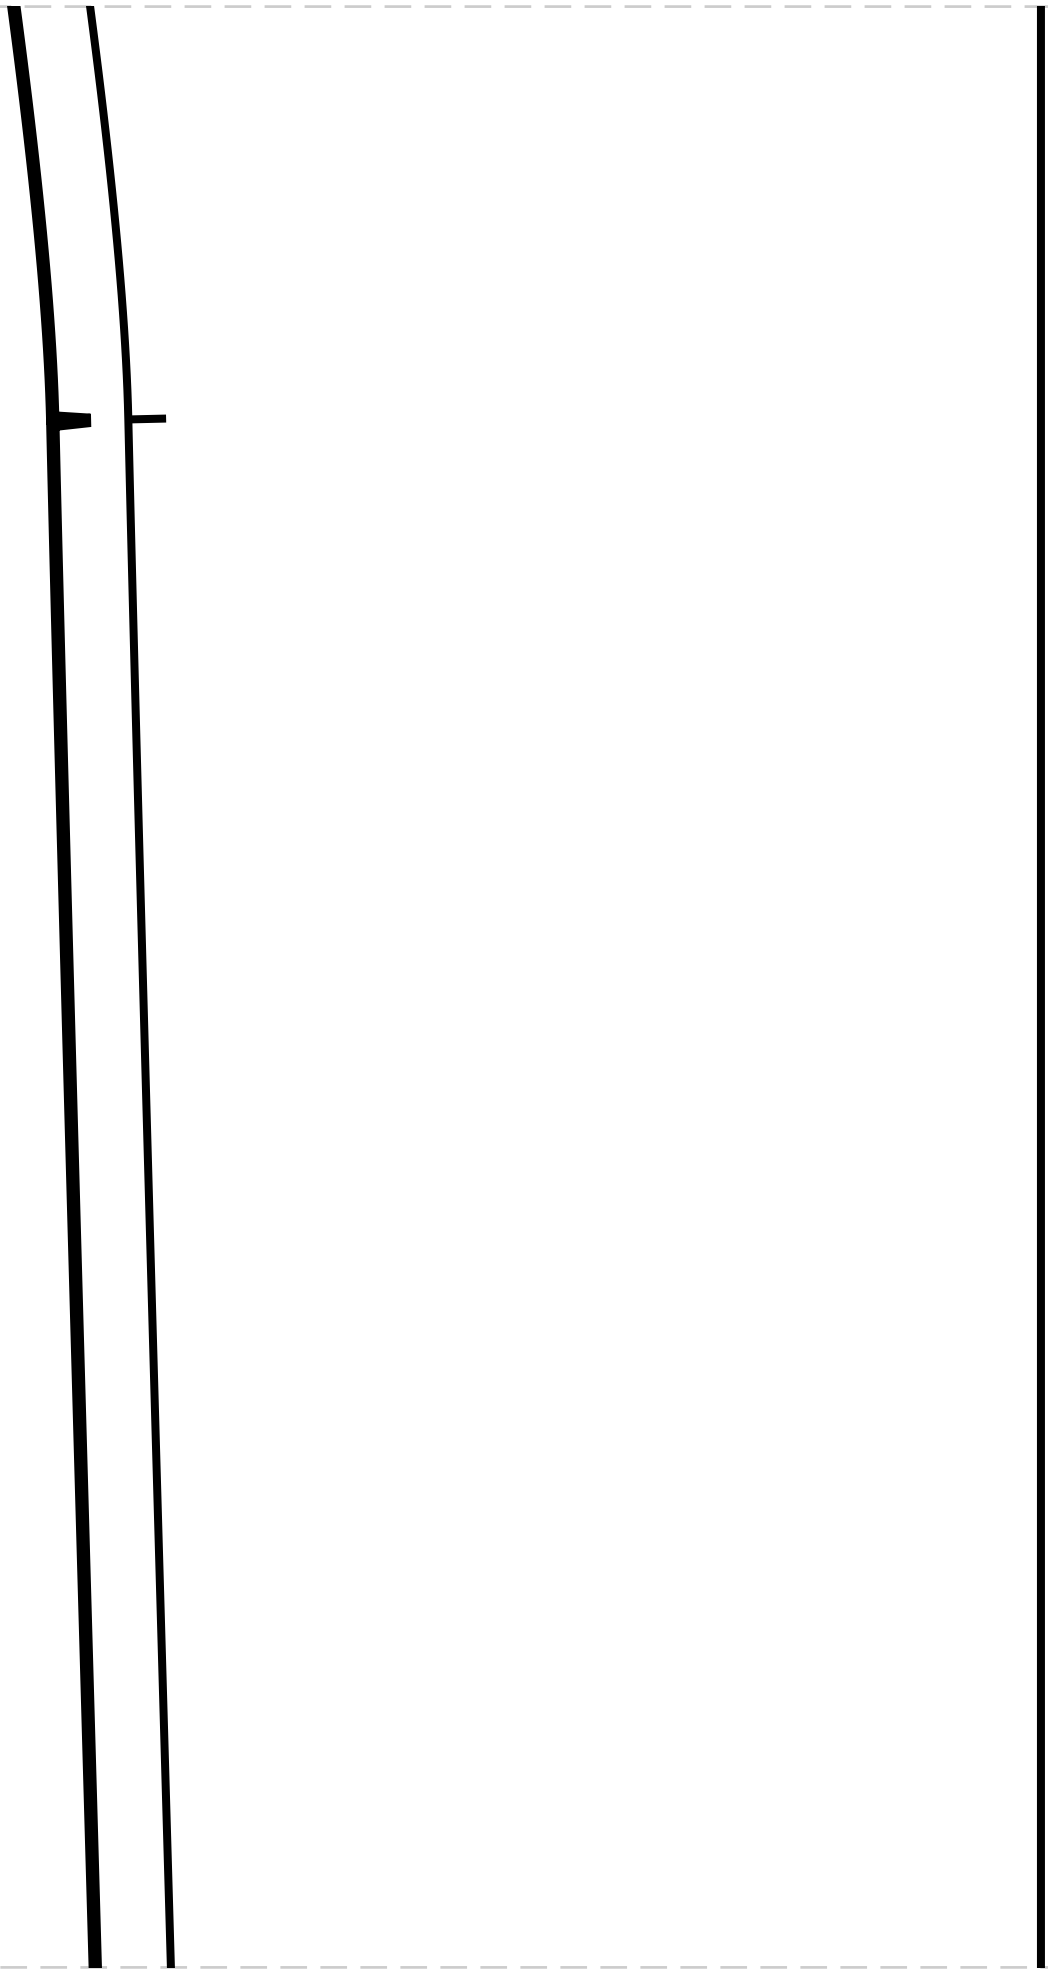


3/2

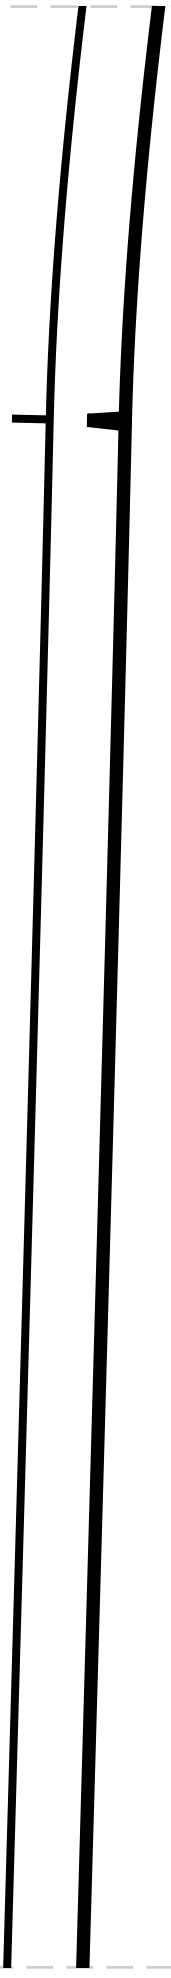

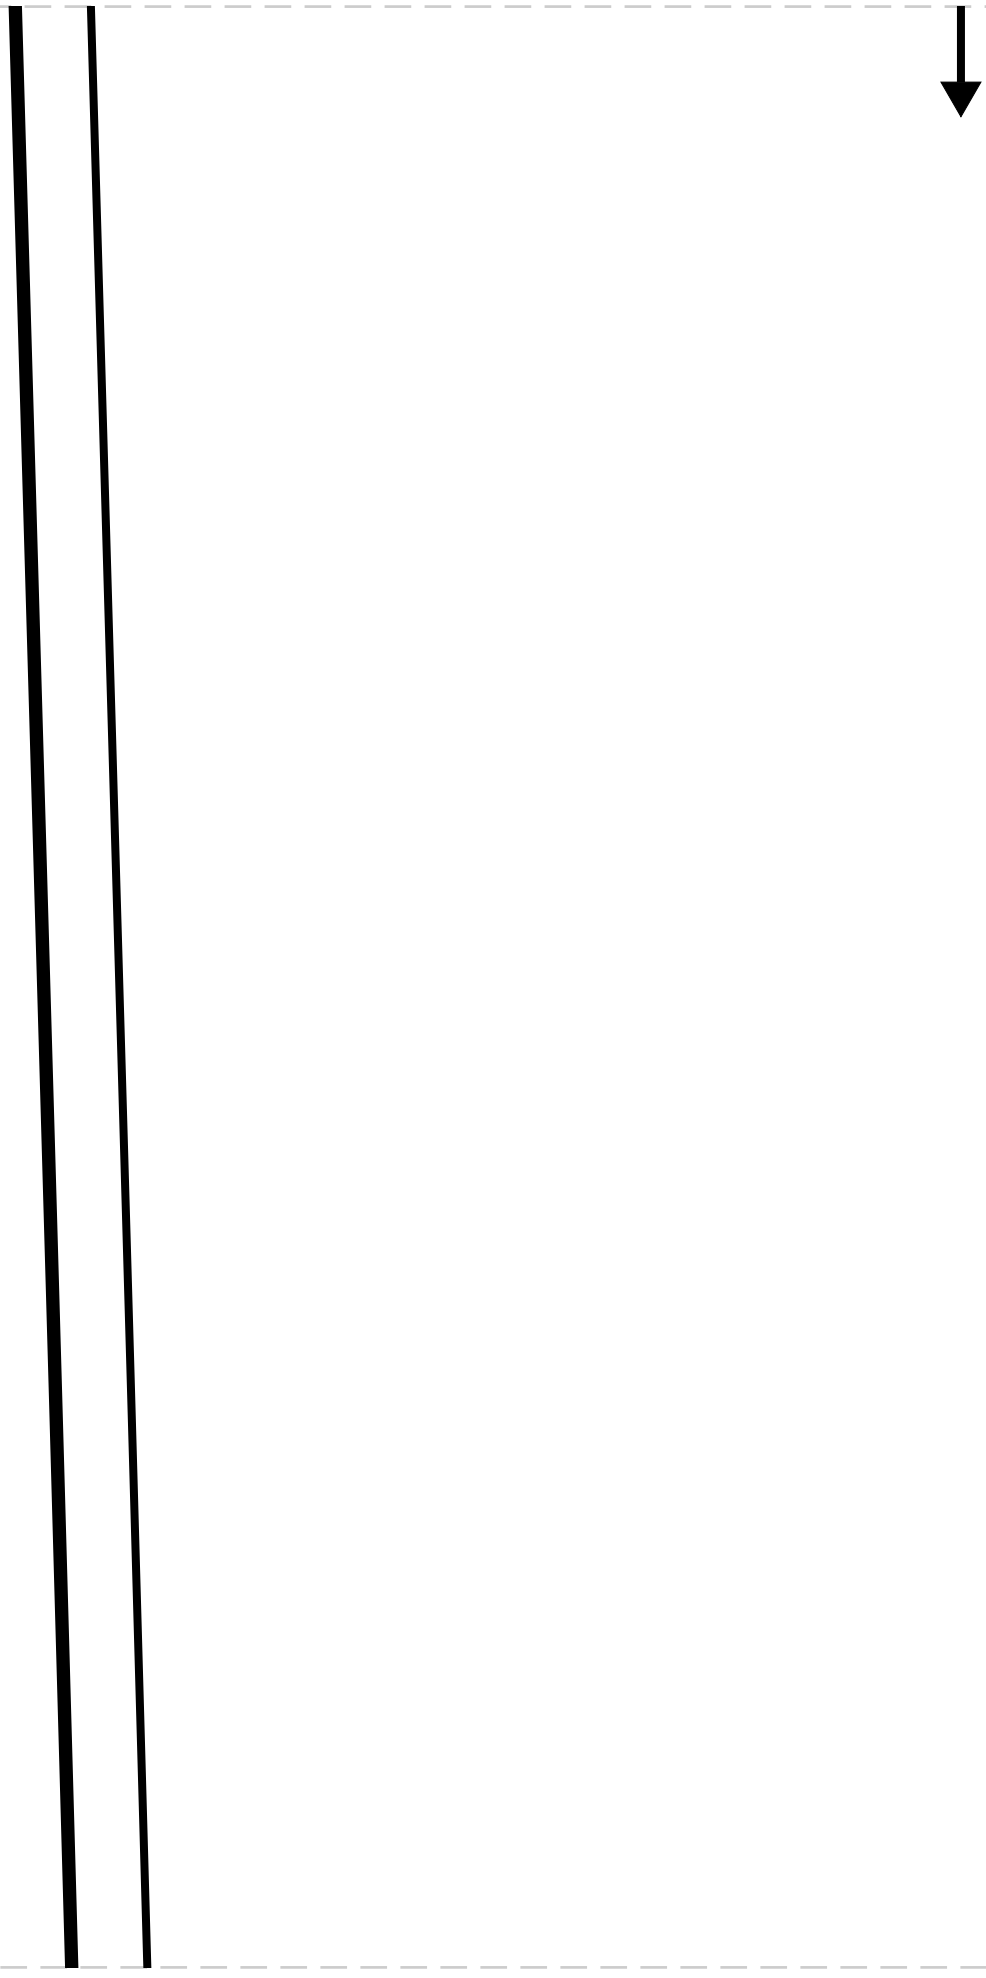

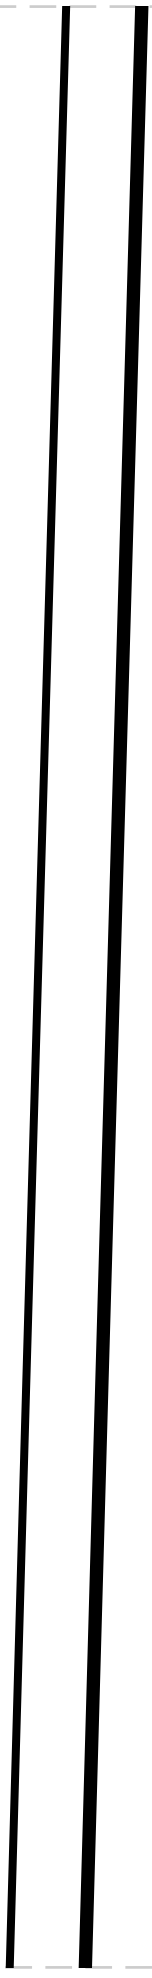

4/3

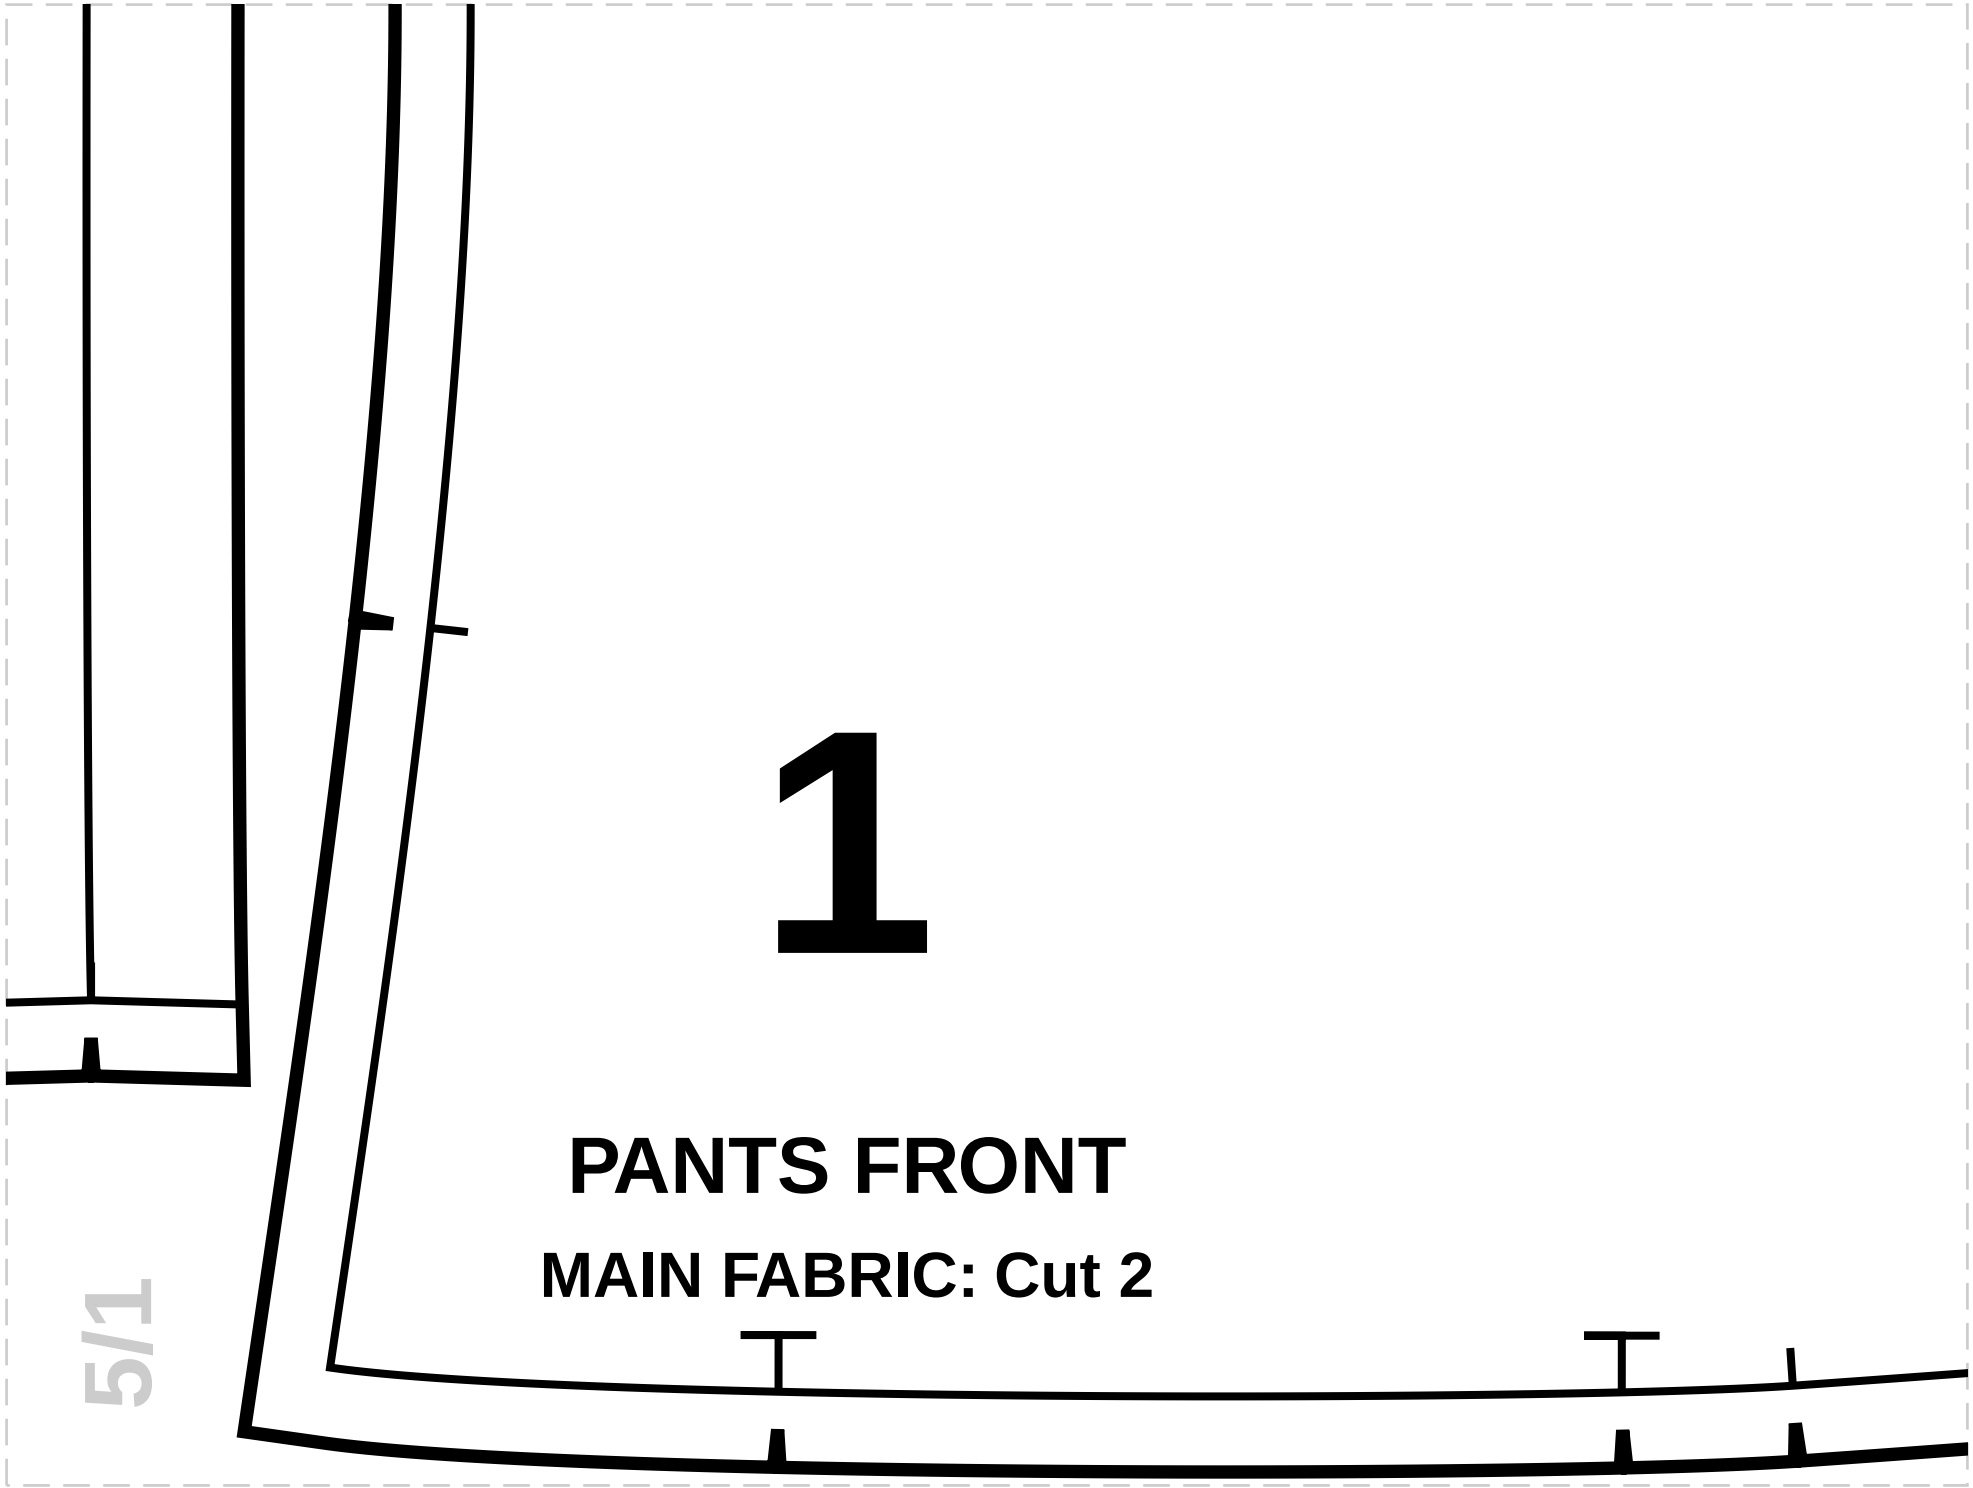


1

PANTS FRONT


MAIN FABRIC: Cut 2

5/1

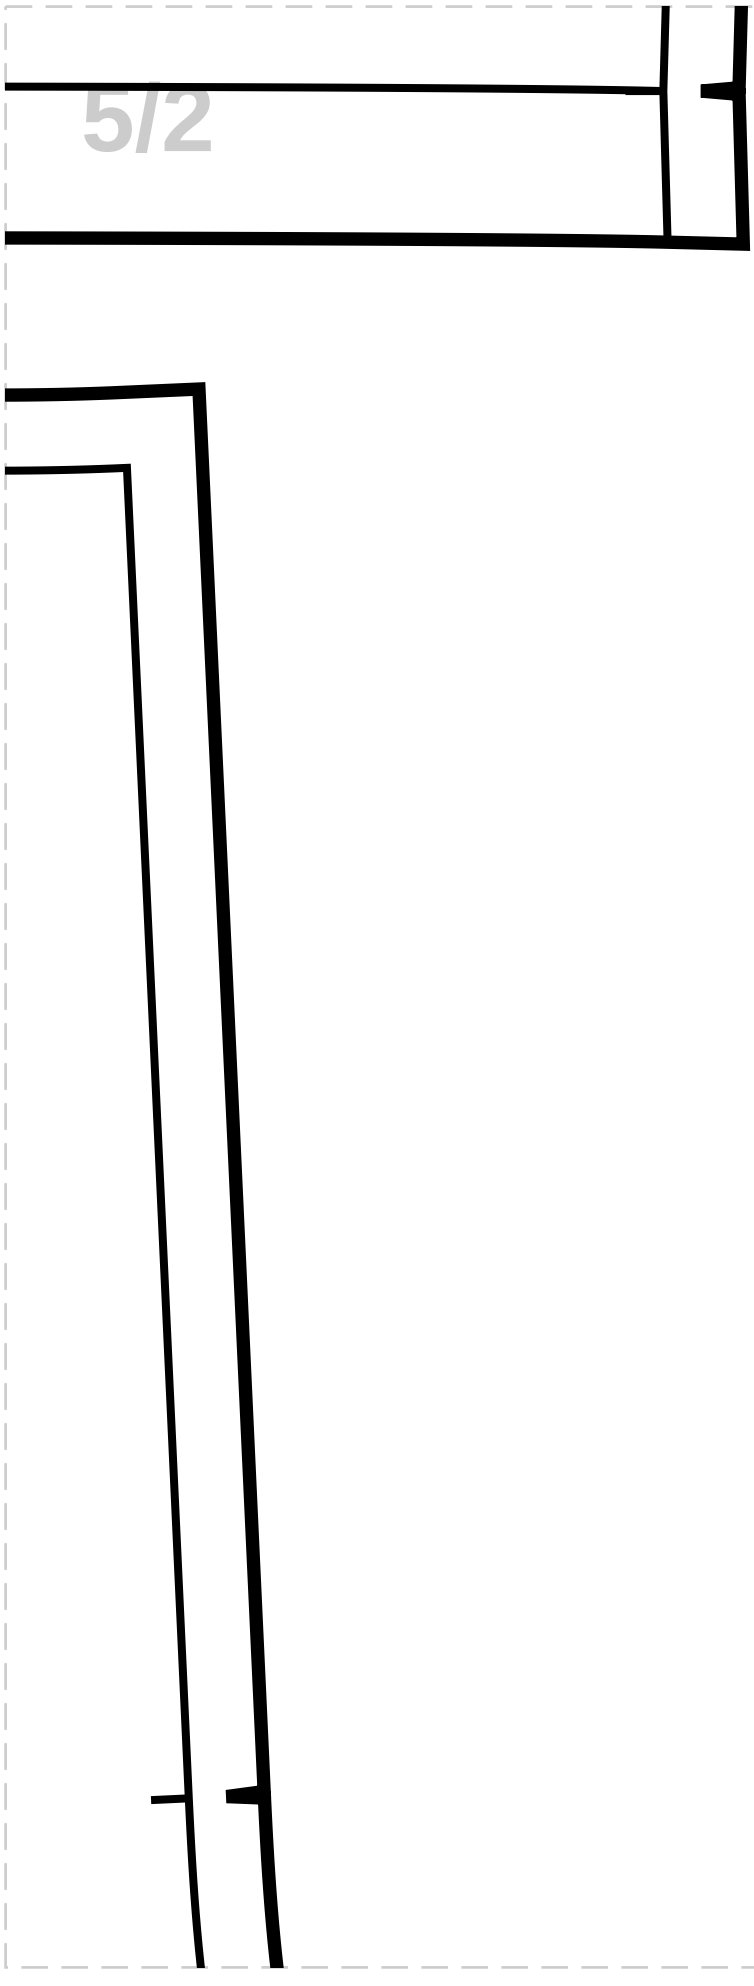

5/2

5/3

5/4

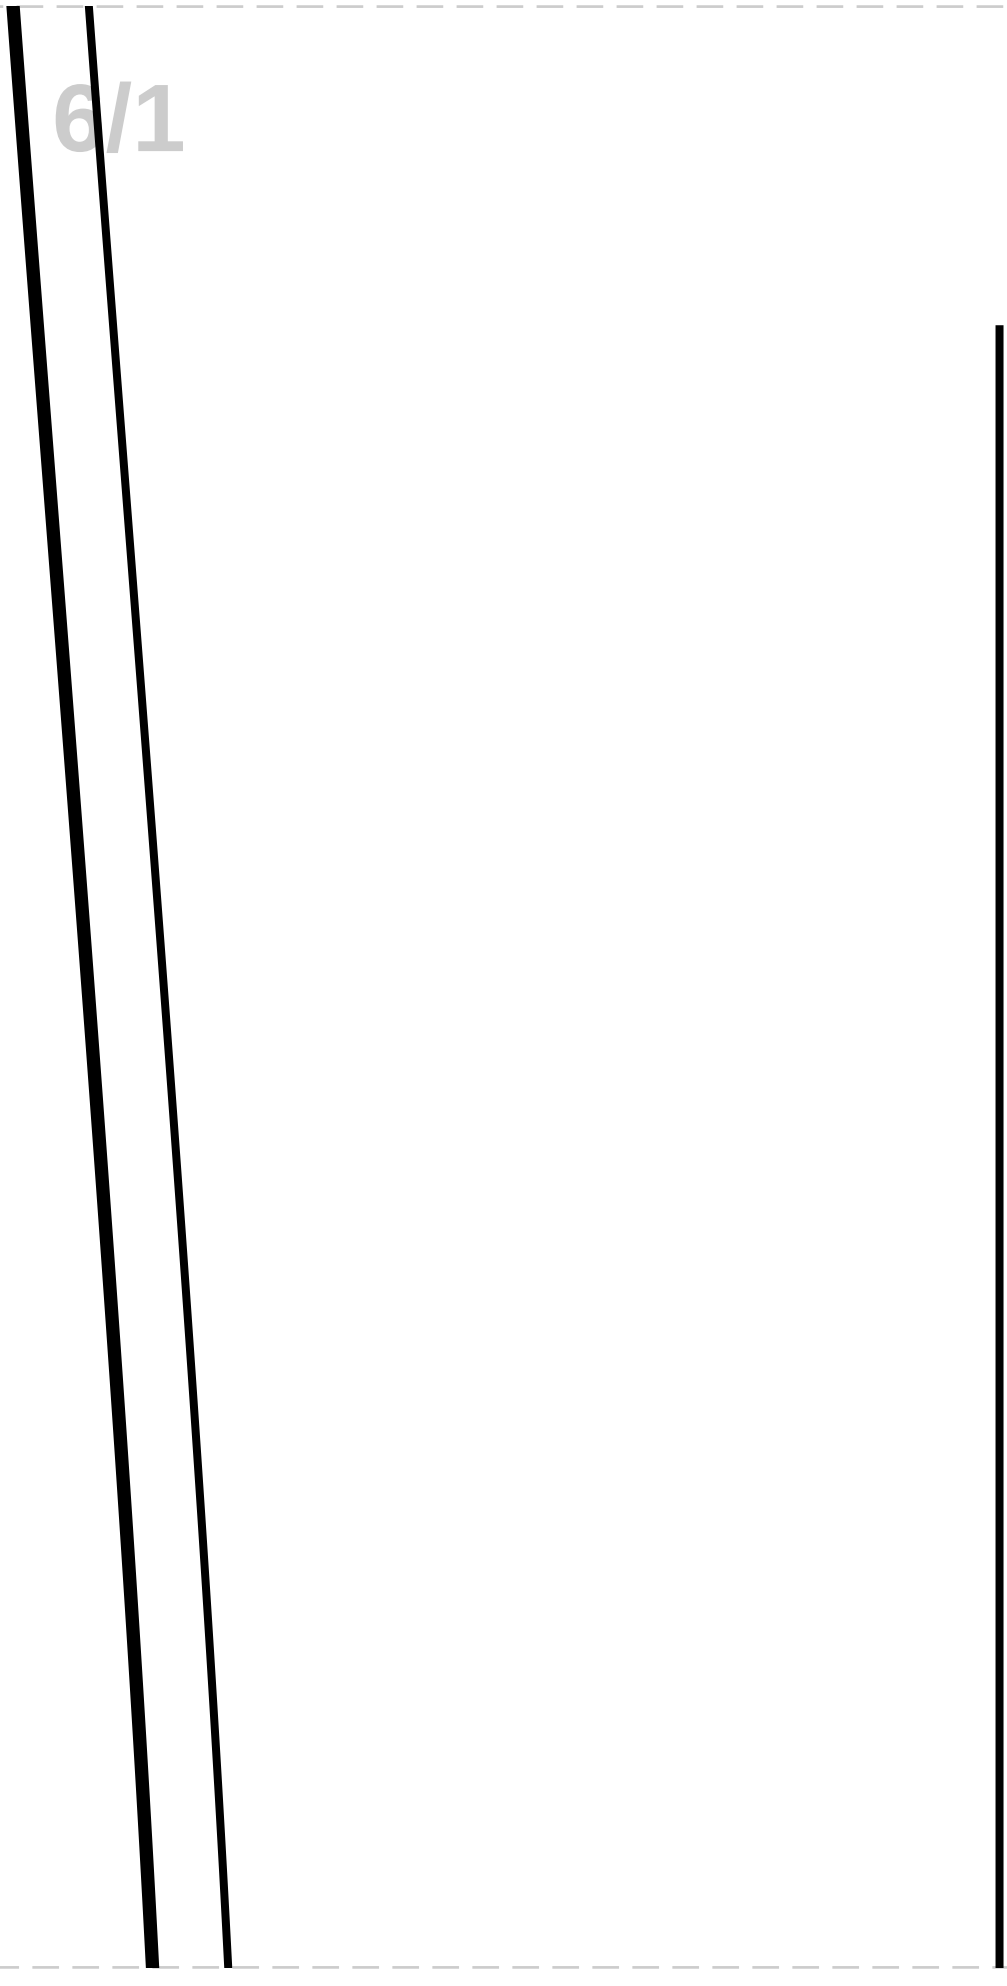


6/2

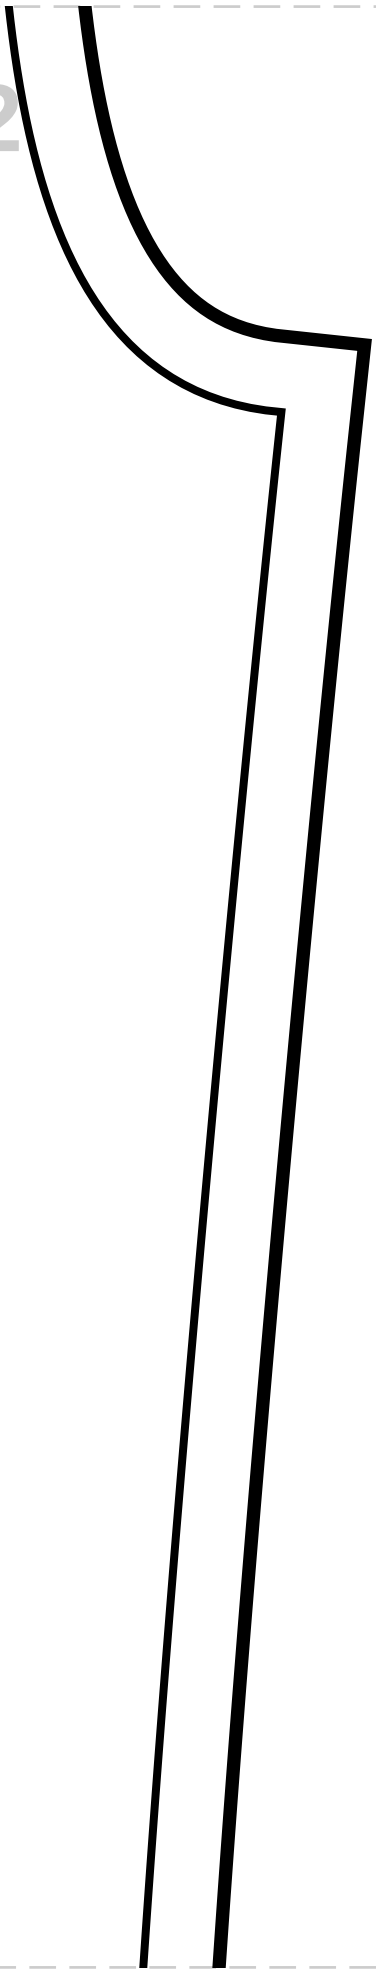


6/3

6/4

6/5

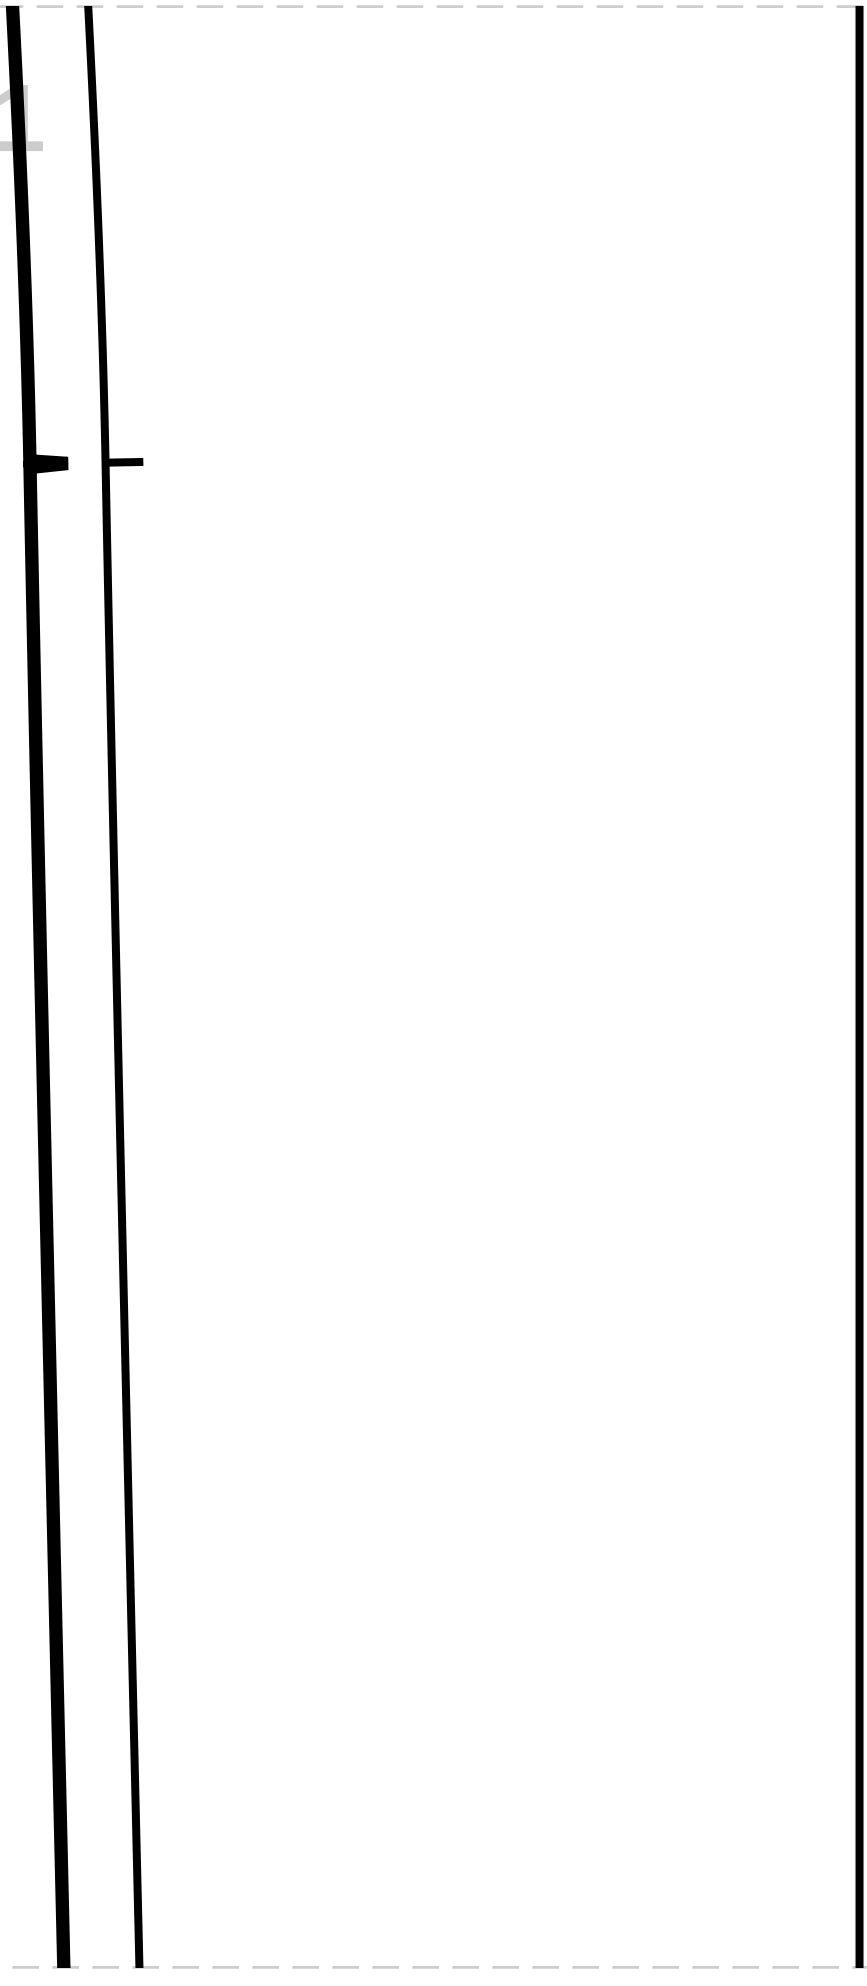



7/2

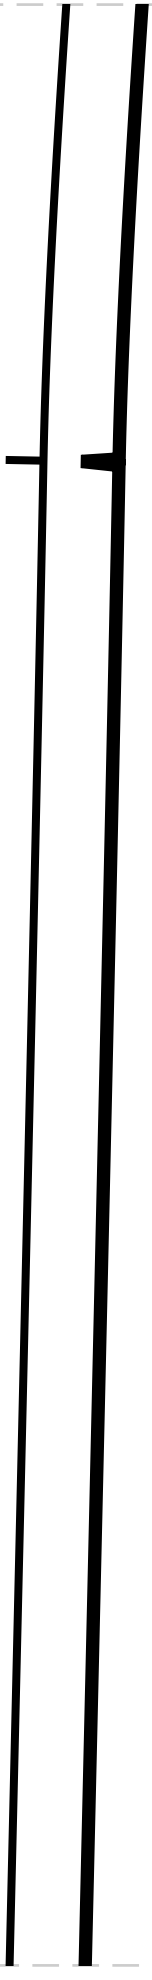

7/3

7/5

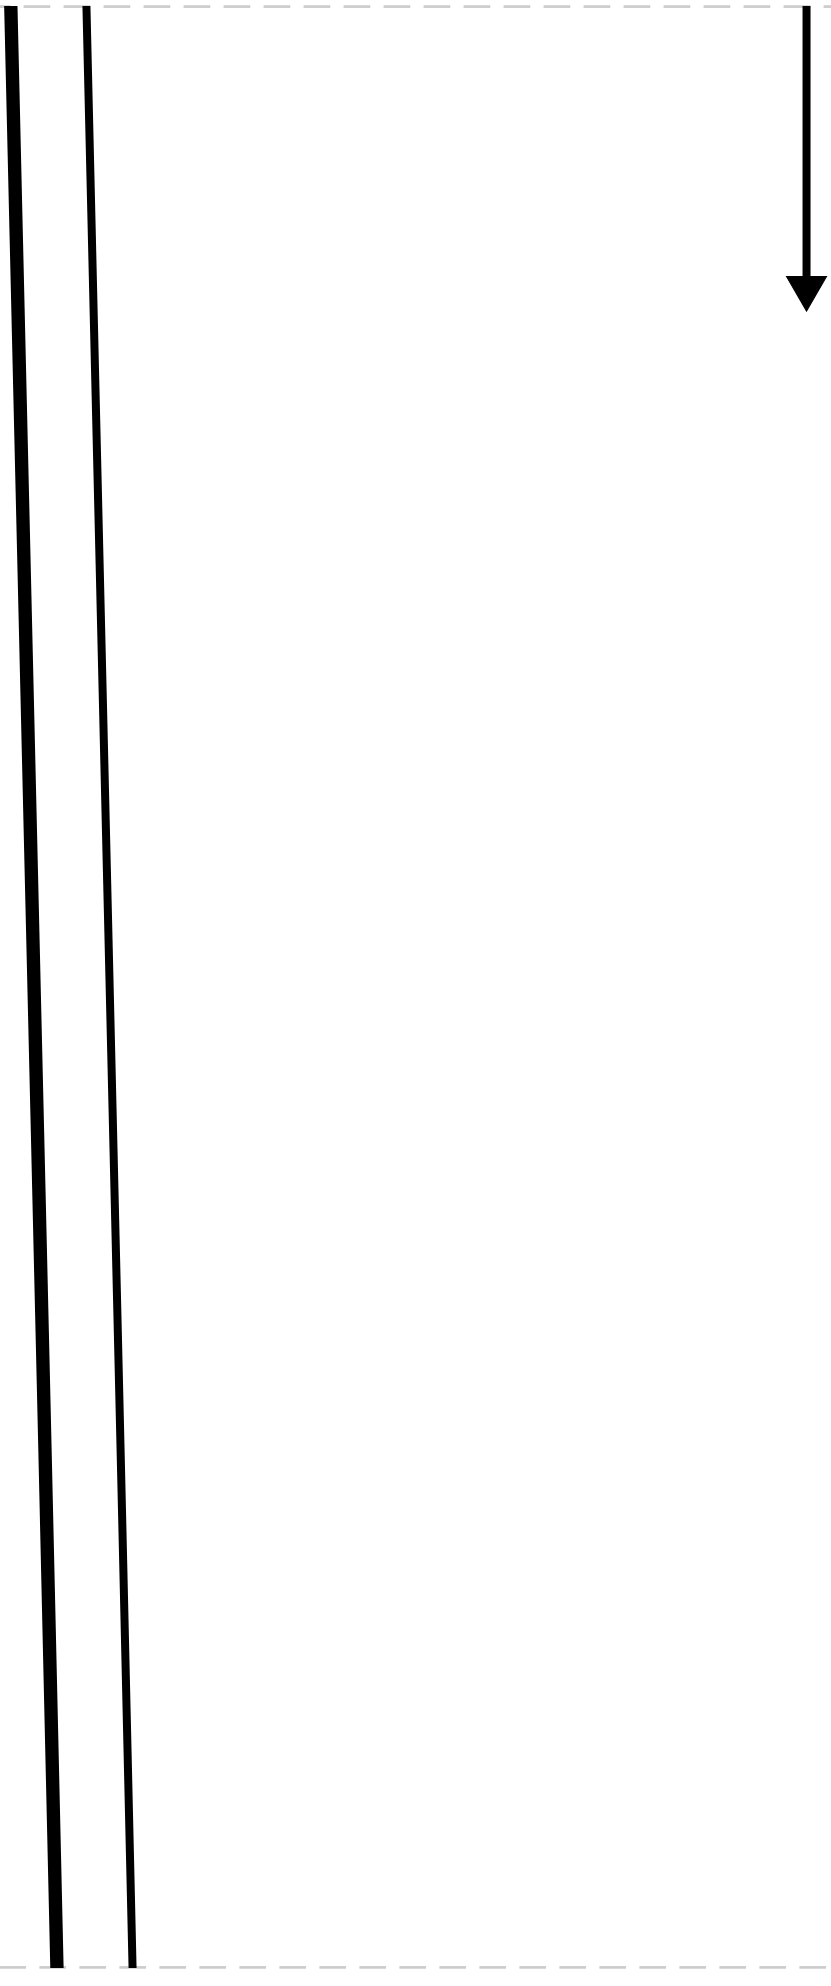


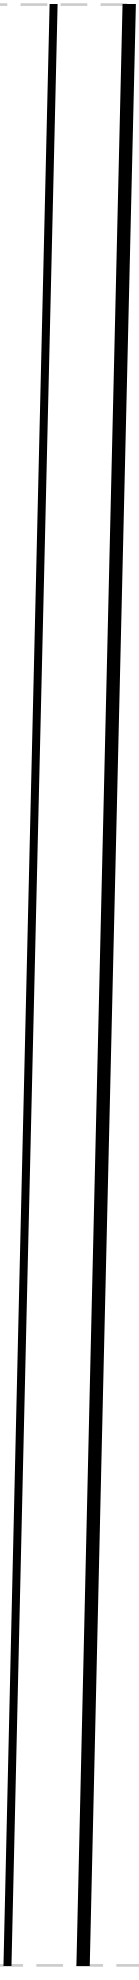



8/3

8/4


8/5

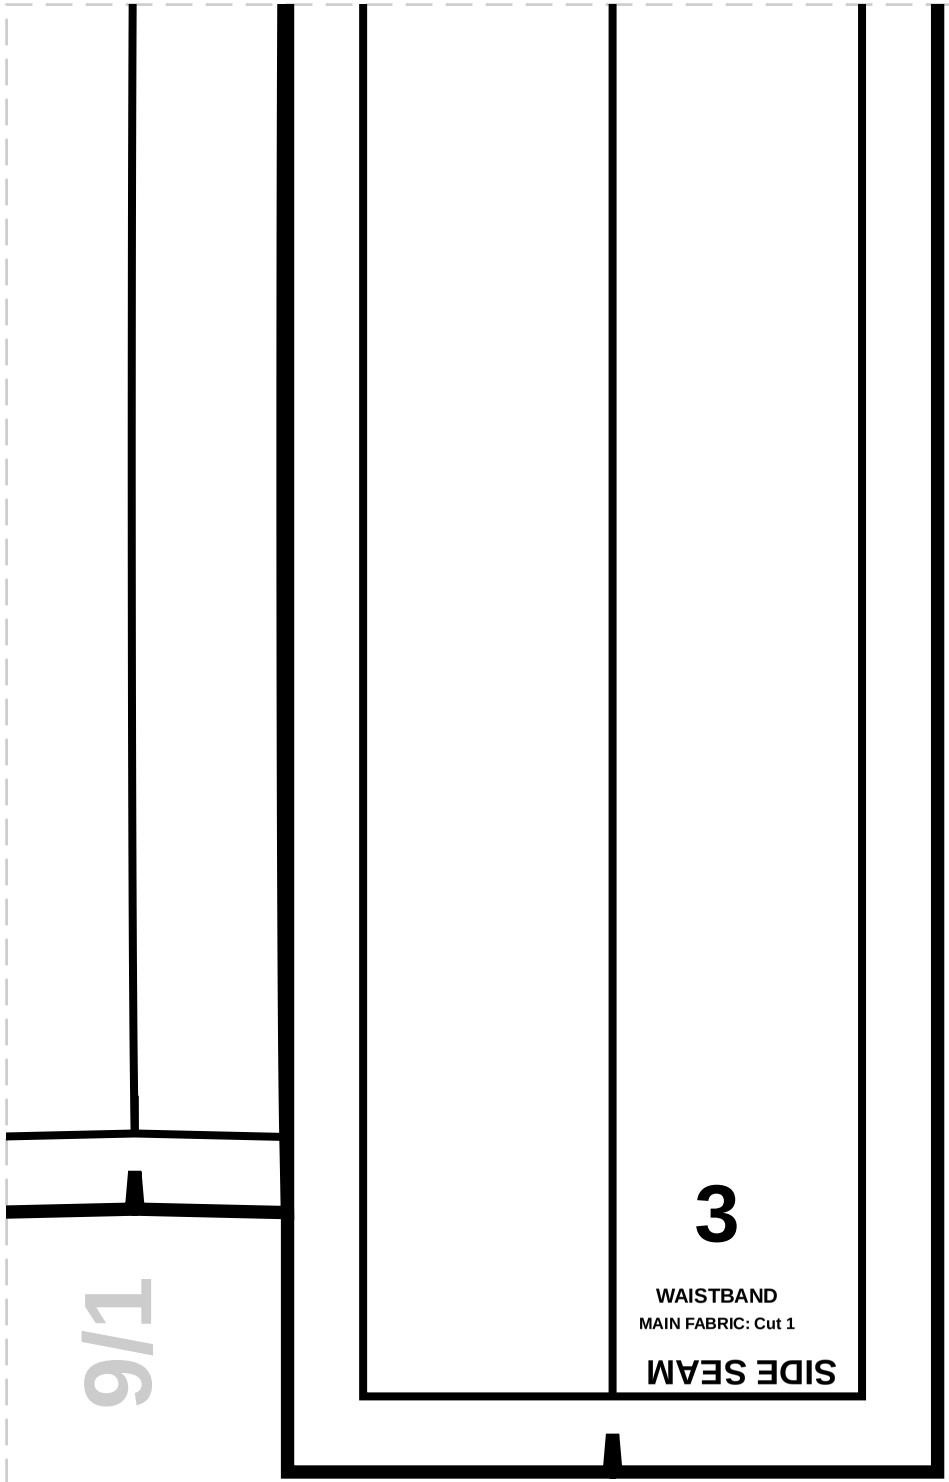

3
WAISTBAND
MAIN FABRIC: Cut 1
SIDE SEAM
9/1

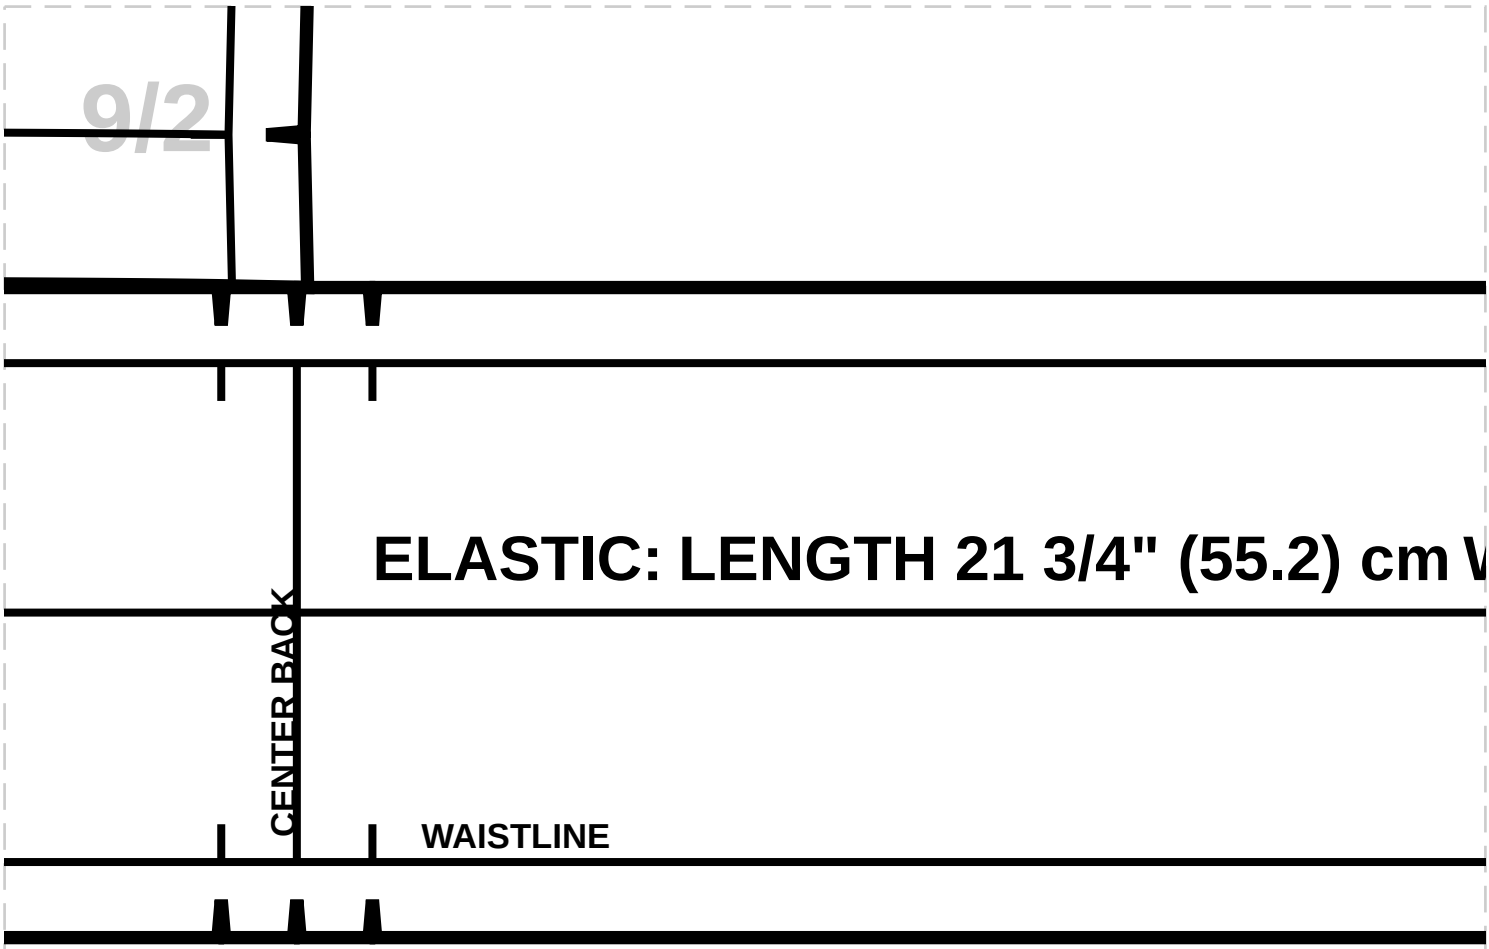
9/2
ELASTIC: LENGTH 21 3/4" (55.2) cm W
CENTER BACK
WAISTLINE

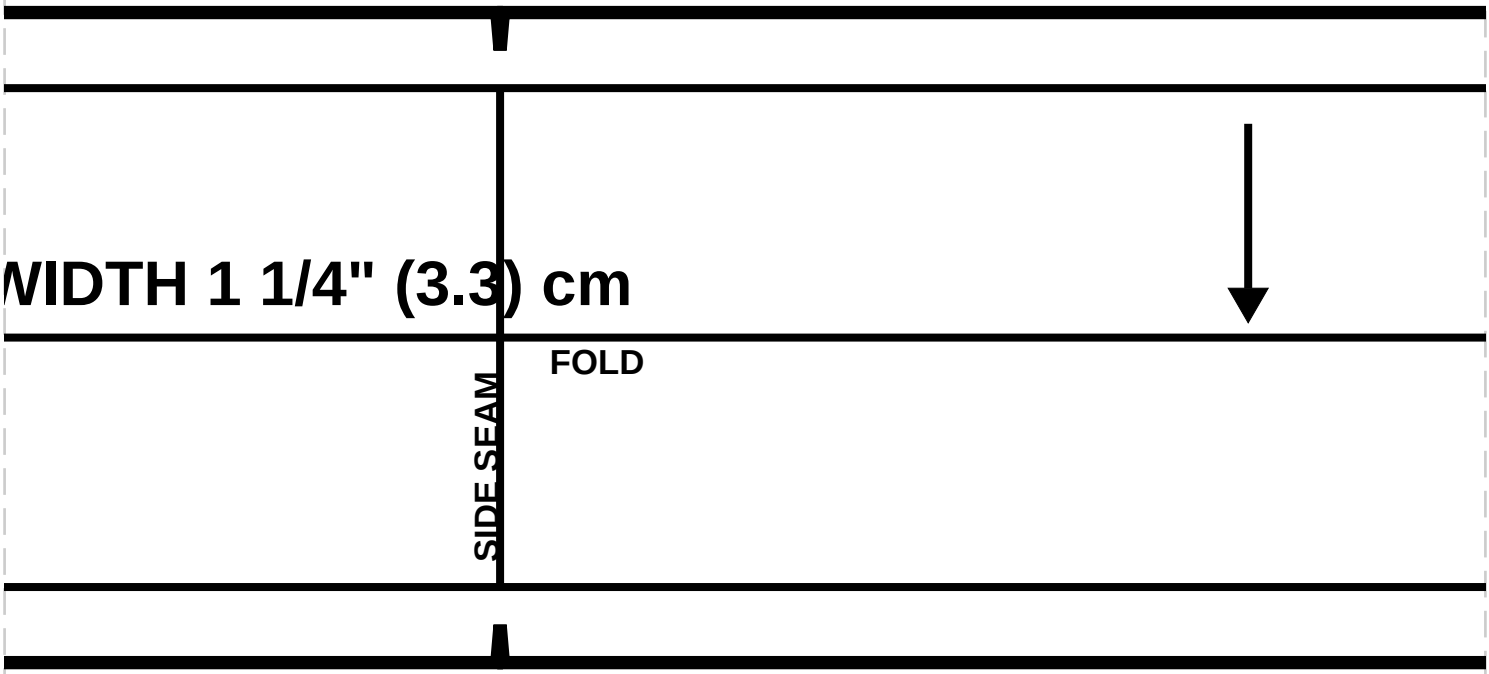
WIDTH 1 1/4" (3.3) cm
FOLD
SIDE SEAM

9/4

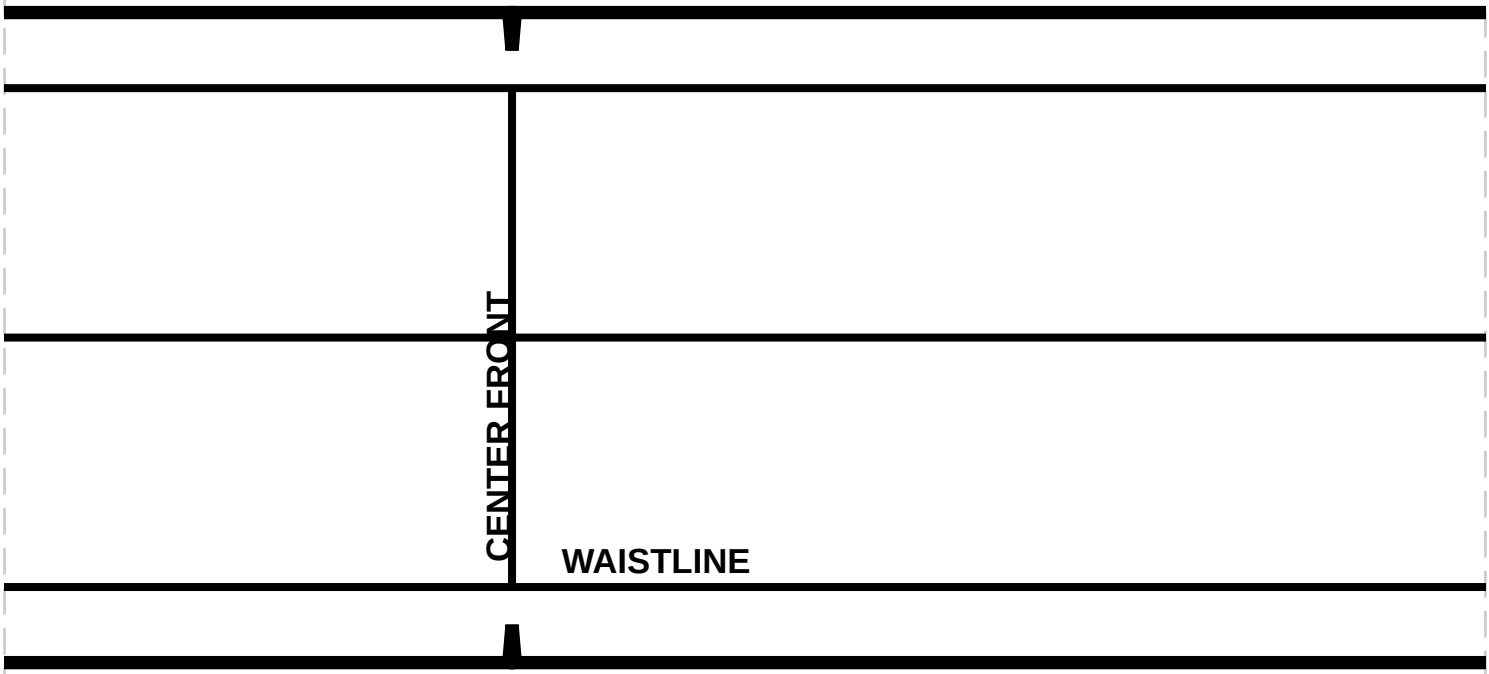

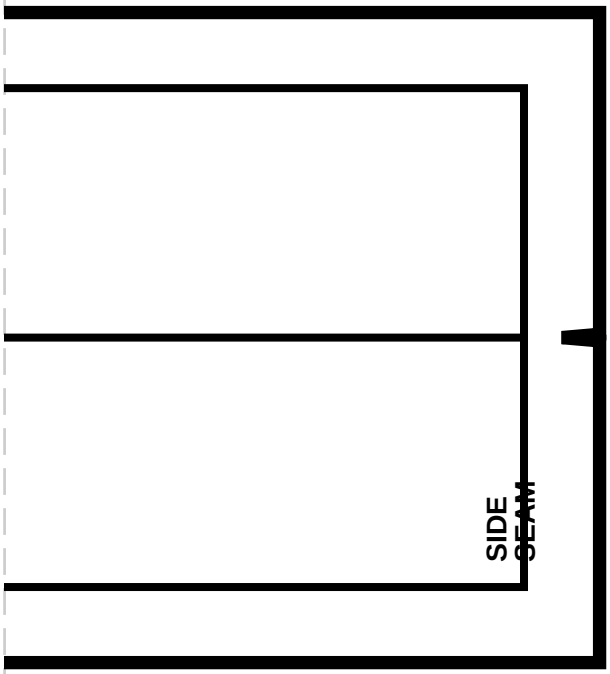
SIDE
SEAM